


The small screws can be M2, M2.5 or 8BA. countersunk

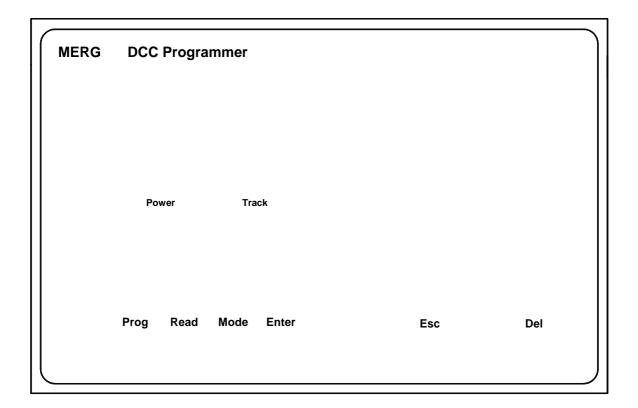

Cutting mask and panel atrwork for programmer.

To fit Rapid Electronics box 30-0325

Uses a 4 x 3 keypad and 4 separate PBs on the same PCB as fpr the handset PBs.