Return to main Glossary index

**Glossary P** 

### Parallel

- 1. Pertaining to the shunt connection of components or circuits.
- 2. Pertaining to the type of operation in a computer when all elements in an information item (e.g., bits in a word) are acted upon simultaneously, rather than serially (one at a time

1/5

3. The condition in which two comparably sized objects or figures are equidistant at all facing points parallel).

### **PCB - Printed Circuit Board**

Usually made of Fibreglass or SRBP (Synthetic Resin Bonded Paper) with a copper laminate on one or both sides, forming the electrical circuit. A detailed Wikipedia article is available here. Most MERG Kits contain a PCB, the majority of them are single sided through hole construction. As the electronics become more sophisticated so double sided and surface mount technologies are being introduced.

## **PCB** software

Software for producing the "Gerber" files which are used in the etching process to produce the required PCB's

#### Peco motor

The PECO implementation of the Point motor, notable because they are constructed so as to be directly attached to both N and 00 gauge PECO track, thus making it easier to line up the pull and throw of the point

#### Phase

- 1. The angular relationship between two points in time of a sine wave.
- 2. The angular relationship between two sine waves simultaneously.

#### ΡΜ

Phase Modulation. A specialist modulation mainly used in Radar equipment, the phase rather than the frequency of the carrier wave is varied in order to obtain information

# PIC

A complex integrated circuit which may be programmed to carry out a controlled sequence of events, ie certain output events controlled by an input event

# PMD1

A piece of electronic kit designed by Gordon Hopkins which may be used to switch fast action point motors See TB G16/14

### PMD2

A piece of electronic kit designed by Gordon Hopkins which may be used to switch slow action point motors See TB G16/15

#### PMR1

Solenoid Point motor /relay driver with onboard relay see TBG16/26

### PNP

A bipolar junction transistor in which the emitter and collector layers are p-type semiconductor material, and the base layer is n-type semiconductor material. See also NPN and Transistor

## **Point Motors**

An electro mechanical device for switching points. There are many examples of point motors, some are fast solenoid switched and others slower acting motor switched

## Points

A track based device for manually or electrically switching one input track to two or more tracks, or two or more tracks into one track. Also called turnouts in NA.

### Polarity

1. The condition of being electrically positive or negative.

- 3. The orientation of the positive and negative poles in a battery or power supply relative to a circuit.
- 4. The orientation of a magnetic field, relative to the surrounding environment.

## Positive

- 1. The condition of being electrically positive or negative.
- 2. The condition of being magnetically north or south.
- 3. The orientation of the positive and negative poles in a battery or power supply relative to a circuit.
- 4. The orientation of a magnetic field, relative to the surrounding environment.

### Pot

Abbreviation for Potentiometer see below

## Potentiometer

- 1. A variable resistor used as a voltage divider. The input voltage is applied across the entire resistance element and the output voltage is taken from the wiper, relative to one end of the element. One end is usually grounded (at zero potential).
- 2. A null device whose operation is based on a variable resistor, and is used for precise voltage measurements. The unknown voltage is applied to the input of a variable resistor whose settings are known with great accuracy; the resistance is adjusted for an output voltage that exactly equals the voltage of a standard cell (as indicated by a null between the two voltages). The unknown voltage is then determined from the resistance and the standard-cell voltage.

## **Power district**

Power to the track is divided into sections. Can be to assist fault finding, to avoid shutting down the whole layout if a short occurs, and in large layouts to provide separate power supplies one to each district.

## **Power pack**

A controller including a power supply to the track.

## Programming

The activity of entering a list of instructions that a computer can act on. That is "run" the programme.

These instructions take the form of a programming language that the computer can understand.

#### **Progressive cab control**

The means to facilitate manually driven trains following one another on the same track but in different electrical sections powered by different controllers. (See MERG Journal August 2005 page 10)

#### PSU

Power supply unit

#### PTP

RPC System - PTP (Point-to-Point) Self contained (non-PC) automatic data transfer system for up to 960 functions each way, using standard RPC Modules. Includes PCBs and all components.


#### Pulse

Can be any shape and is normally a short period of time

### **Pulse Modulation**

There are basically 3 forms of pulse modulation, Amplitude, Position, and width, each having its own characteristics and uses. This type of modulation may be superimposed onto RF or on DC voltages.

### **Pulsed output**

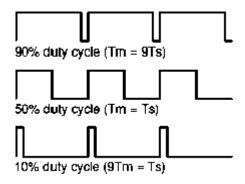

Permanent link: https://www.merg.org.uk/merg\_wiki/doku.php?id=glossary:glossary\_p&rev=1420768773

Last update: 2015/01/09 01:59

